

## INSTALLATION INSTRUCTIONS MCD MODBUS MODULE

Order Code: 175G9000

### Introduction

MCD 3000 and MCD 200 Series soft starters can be controlled and monitored across an RS485 serial communication network using the Modbus RTU and AP ASCII protocols.

For users requiring simple control of an MCD 200 soft starter using Modbus RTU or AP ASCII, the instructions below describe the installation and operation of the Modbus Module.

MCD 200 starters can also connect to the network via a correctly configured Remote Operator - see *Appendix A* for details.


MCD 3000 soft starters have AP ASCII protocol support built in - see the MCD 3000 Operating Instructions for details of message formats. The MCD 3000 supports Modbus RTU control when used in conjunction with a Remote Operator.

This document describes Modbus messaging and *Appendix A* describes how to connect the Remote Operator.

### Installation


Install the Modbus Module using the following procedure:

1. Remove control power and mains supply from the soft starter.
2. Attach the Modbus Module to the starter as shown.
3. Apply control power to the soft starter.

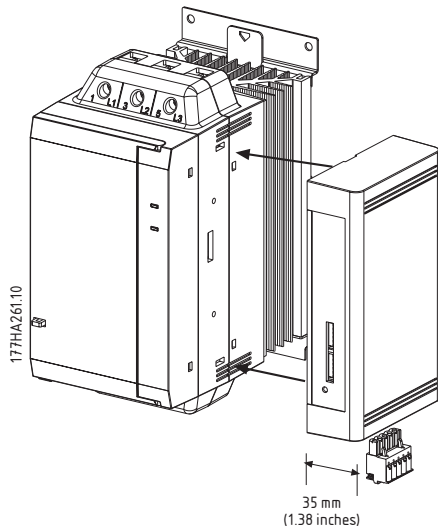

Remove the Modbus Module using the following procedure:

1. Remove power from the module.
2. Remove control power and mains supply from the soft starter.
3. Push a small flat-bladed screwdriver into the slots at the top and bottom of the module and depress the retaining clips.
4. Pull the module away from the soft starter.

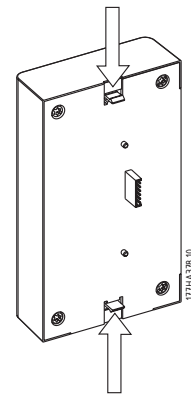

### CAUTION

Remove control power and mains supply from the soft starter before attaching or removing accessories. Failure to do so may damage the equipment.

### Adjustment


Network communication parameters must be set on the Modbus Module.

DIP SWITCH A	1	<input type="checkbox"/>	Protocol	AP ASCII	<input type="checkbox"/>	RTU	<input type="checkbox"/>
	2	<input type="checkbox"/>		OFF		ON	
DIP SWITCH B	3	<input type="checkbox"/>	Address	Example: Address = 24			
	4	<input type="checkbox"/>		+16	<input type="checkbox"/>	0	<input type="checkbox"/>
	5	<input type="checkbox"/>		+8	<input type="checkbox"/>	0	<input type="checkbox"/>
	6	<input type="checkbox"/>		+4	<input type="checkbox"/>	0	<input type="checkbox"/>
	ON	<input type="checkbox"/>		+2	<input type="checkbox"/>	0	<input type="checkbox"/>
	ON	<input type="checkbox"/>		+1	<input type="checkbox"/>	0	<input type="checkbox"/>
		ON					
DIP SWITCH B	1	<input type="checkbox"/>	Baud Rate	4800	<input type="checkbox"/>	9600	<input type="checkbox"/>
	2	<input type="checkbox"/>		OFF	OFF	ON	ON
	3	<input type="checkbox"/>		OFF	ON	OFF	ON
	4	<input type="checkbox"/>		OFF	ON	OFF	ON
DIP SWITCH B	5	<input type="checkbox"/>	Parity	No Parity	ODD	EVEN	10 bit
	6	<input type="checkbox"/>		OFF	OFF	ON	ON
	ON	<input type="checkbox"/>		OFF	ON	OFF	ON
	ON	<input type="checkbox"/>		OFF	ON	OFF	ON
DIP SWITCH B	1	<input type="checkbox"/>	Timeout (seconds)	No Time Out	<input type="checkbox"/>	10 s	<input type="checkbox"/>
	2	<input type="checkbox"/>		OFF	OFF	ON	ON
	3	<input type="checkbox"/>		OFF	ON	OFF	ON
	4	<input type="checkbox"/>		OFF	ON	OFF	ON

177HA262.11

## MCD Modbus Module


### ■ Connection

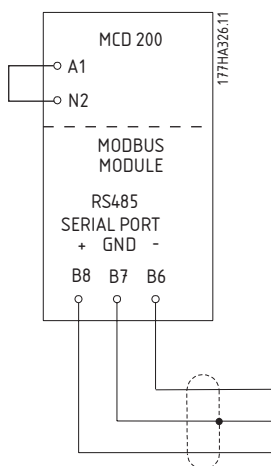

#### N.B.!

For the Modbus Module to operate correctly, a link must be fitted across terminals A1-N2 on the starter.

### ■ Network Status LED

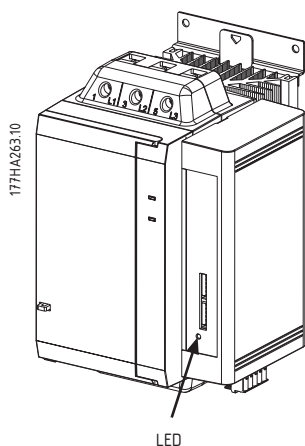

The Network Status LED indicates the state of the communications link between the module and the network. LED operation is as follows:

Off	On	Flashing
No connection	Network active	Network inactive



#### N.B.!

If the network is inactive, the soft starter may trip if the Communications Timeout function has been set on the module. When communication is restored, the MCD 200 will require an individual Reset.

### ■ Modbus Register

Register Address	Type	Description	
40002 Command	Write	1 = Start 2 = Stop 3 = Reset 4 = Quick stop 5 = Forced communication trip	
40003 Starter status	Read	<b>Bit</b>	<b>Description</b>
		0 to 3	1 = Ready 2 = Starting 3 = Running 4 = Stopping 5 = Restart delay ** 6 = Tripped 7 = Programming mode **
		4	1 = Forward phase rotation *
		5	1 = Current exceeds FLC ***
		6 *	0 = Uninitialised 1 = Initialised (Bit 4 is only valid if Bit 6 = 1)
		7	0 = Remote Operator status OK 1 = Remote Operator fault
40004 Trip code	Read	255 = No trip 0 = Shorted SCR ** 1 = Excess start time * 2 = Motor overload * 3 = Motor thermistor * 4 = Phase imbalance * 5 = Supply frequency 6 = Phase rotation * 7 = Instantaneous overcurrent ** 8 = Power circuit fault 9 = Undercurrent ** 10 = Starter overtemperature ** 11 = Motor connection error ** 13 = FLC range error ** 15 = Communication failure between starter and module 16 = Communication failure between module and network 33 = Bypass overload ***	
40005 Current	Read	*	
40006 Temperature	Read	*	
40007 Product type and version	Read	<b>Bit</b>	<b>Description</b>
		0 to 2	Parameter list version
		3 to 7	1 = MCD 3000 4 = MCD 200

## MCD Modbus Module

40008 RS485 Protocol version**	Read	RS485 protocol version
40009 to 40061 Starter parameters 1 to 53**	Multiple read or single write	Upload or download parameters from the starter (see MCD 3000 Operating Instructions for details)

\* Only available on MCD 202 and MCD 3000 units.

\*\* Only available on MCD 3000 units

\*\*\* Only available on MCD 202 units.

### ■ Modbus Hex Functions

MCD 3000 and MCD 200 Series soft starters support two functions:

- 03 (Multiple Read)
- 06 (Single Write)

MCD 3000 and MCD 200 Series soft starters do not support broadcast functions.



#### N.B.!

Command, Starter Status, Trip Code, Motor Current, Motor Temperature, Product Type/Version, RS485 Protocol Version and Parameter Upload must be sent individually (i.e. one data word request at a time).

Least significant bit is transmitted first.

Command: Start

Message	Starter Address	Function Code	Register Address	Data	CRC
In	20	06	40002	1	CRC1, CRC2
Out	20	06	40002	1	CRC1, CRC2

Starter Status: Running

Message	Starter Address	Function Code	Register Address	Data	CRC
In	20	03	40003	1	CRC1, CRC2
Out	20	03	2	xxxx0011	CRC1, CRC2

Trip Code: Motor Overload

Message	Starter Address	Function Code	Register Address	Data	CRC
In	20	03	40004	1	CRC1, CRC2
Out	20	03	2	00000010	CRC1, CRC2

Download parameter from starter (MCD 3000 only) -  
Read Parameter 3, Initial Current, 350%

Message	Starter Address	Function Code	Register Address	Data	CRC
In	20	03	40011	1	CRC1, CRC2
Out	20	03	2	350	CRC1, CRC2

Upload parameter to starter (MCD 3000 only) -  
Write Parameter 17, Soft Stop Profile, set = 3

Message	Starter Address	Function Code	Register Address	Data	CRC
In	20	06	40025	3	CRC1, CRC2
Out	20	03	40025	3	CRC1, CRC2

### ■ Modbus Error Codes

Code	Description	Example
01	Illegal function code	Function other than 03 or 06
02	Illegal data address	Not in range 40002 to 40255
03	Not readable data	Register not allowed for data reading
04	Not writable data	Register not allowed for data writing
05	Data boundary fault	Multiple data transfer across data boundary, or data size more than 127
06	Invalid command code	Writing "6" into 40002
07	Illegal parameter read	Invalid parameter number
08	Illegal parameter write	Invalid parameter number, read only, or hidden parameter
09	Unsupported command	Writing parameter with starter running (not applicable for MCD 200 Series)
10	Local communication error	Communication error between Modbus slave and starter



#### N.B.!

Some of the above codes are different from those defined in the Modbus Application Protocol Specification available on [www.modbus.org](http://www.modbus.org).

## MCD Modbus Module

### ■ AP ASCII Protocol

This section describes AP ASCII communications with MCD 200 soft starters. For details of AP ASCII message formats for MCD 3000 soft starters, see the MCD 3000 Operating Instructions.

The message fragments used in communicating with the MCD 200 are shown below. The message fragments may be assembled into complete messages as described in the sections that follow.



#### N.B.!


Data transmitted to and from the Modbus Module must be in 8 bit ASCII, no parity, 1 stop bit.

Message Fragment Type	ASCII Character String or (Hexadecimal Character String)
Send address	EOT [nn] [lrc] ENQ or (04h [nn] [lrc] 05h)
Send command	STX [ccc] [lrc] ETX or (02h [ccc] [lrc] 03h)
Send request	
Receive data	STX [dddd] [lrc] ETX or (02h [dddd] [lrc] 03h)
Receive status	STX [ssss] [lrc] ETX or (02h [ssss] [lrc] 03h)
ACK (acknowledge)	ACK or (06h)
NAK (negative acknowledge)	NAK or (15h)
ERR (error)	BEL or (07h)

- nn = two byte ASCII number representing the soft starter address where each decimal digit is represented by n.
- lrc = two byte longitudinal redundancy check in hexadecimal.
- ccc = three byte ASCII command number where each character is represented by c.
- dddd = four byte ASCII number representing the current or temperature data where each decimal digit is represented by d.
- ssss = four byte ASCII number. The first two bytes are ASCII zero. The last two bytes represent the nibbles of a single byte of status data in hexadecimal.

### Commands

Commands can be sent to the soft starter using the following format:

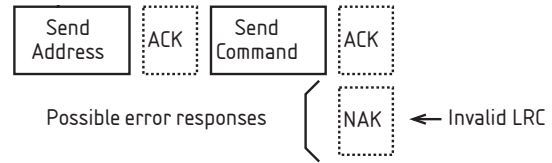


= Master       = Slave (MCD)

Command	ASCII	Comment
Start	B10	Initiates a start
Stop	B12	Initiates a stop
Reset	B14	Resets a trip state
Coast to stop	B16	Initiates an immediate removal of voltage from the motor. Any soft stop settings are ignored.
Forced communication trip	B18	Causes a communications trip

### Status Retrieval

Soft starter status can be retrieved using the following format:

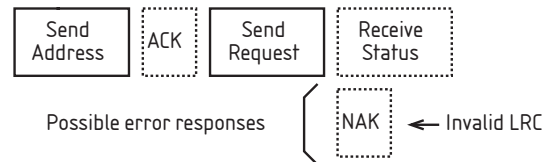

= Master       = Slave (MCD)

Request	ASCII	Receive Status (ssss)
Trip code	C18	Requests the trip status of the starter. 255 = No trip 1 = Excess start time * 2 = Motor overload * 3 = Motor thermistor * 4 = Phase imbalance * 5 = Supply frequency 6 = Phase rotation * 8 = Power circuit fault 15 = Communication failure between starter and module 16 = Communication failure between module and network 33 = Bypass overload *


## MCD Modbus Module

Starter status	C22	Bit	Description
		0 to 3	0 = Not used 1 = Ready 2 = Starting (including Pre-start tests) 3 = Running 4 = Stopping 6 = Tripped
		4	1 = Forward phase rotation *
		5	1 = Current exceeds the FLC *
		6 *	0 = Uninitialised 1 = Initialised (Bit 4 is only valid if Bit 6 = 1)
		7	0 = Remote Operator status OK 1 = Remote Operator fault

\* = MCD 202 models only.

### Data Retrieval

Data can be retrieved from closed loop MCD 202 models using the following format:

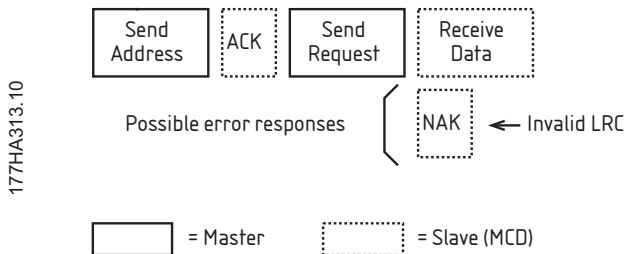

Request	ASCII	Receive Data (dddd)
Motor current	D10	Requests motor current. The data is four byte decimal ASCII. Minimum value 0000 A, maximum value 9999 A.
Motor temperature	D12	Requests the calculated value of the motor thermal model as a % of motor thermal capacity. The data is four byte decimal ASCII. Minimum value is 0000%. Trip point is 0105%.

### Calculating the Checksum (LRC)

Each command string sent to and from the starter includes a checksum. The form used is the longitudinal redundancy check (LRC) in ASCII hex. This is an 8-bit binary number represented and transmitted as two ASCII hexadecimal characters.

To calculate LRC:

1. Sum all ASCII bytes
2. Mod 256
3. 2's complement
4. ASCII convert

For example Command String (Start):

```
ASCII  STX  B    1    0
or     02h 42h 31h 30h
```

```
ASCII  Hex  Binary
STX    02h  0000 0010
B42h   0100 0010
131h   0011 0001
030h   0011 0000
```

```

A5h   1010 0101      SUM (1)
A5h   1010 0101      MOD 256 (2)
5Ah   0101 1010      1's COMPLEMENT
01h   0000 0001      + 1 =
5Bh   0101 1011      2's COMPLEMENT (3)
ASCII  5    B
or     35h  42h      ASCII CONVERT (4)
                          LRC CHECKSUM
```

The complete command string becomes:

```
ASCII  STX  B    1    0    5    B    ETX
or     02h 42h 31h 30h 35h 42h 03h
```

To verify a received message containing an LRC:

1. Convert last two bytes of message from ASCII to binary
2. Left shift 2<sup>nd</sup> to last byte four bits
3. Add to last byte to get binary LRC
4. Remove last two bytes from message
5. Add remaining bytes of message
6. Add binary LRC
7. Round to one byte
8. The result should be zero

Response or status bytes are sent from the starter as an ASCII string:

```
STX    [d1]h [d2]h [d3]h [d4]h LRC1 LRC2 ETX
d1 =   30h
d2 =   30h
d3 =   30h plus upper nibble of status byte right shifted
by four binary places
d4 =   30h plus lower nibble of status byte
```

For example status byte = 1Fh, response is:

```
STX    30h  30h  31h  46h  LRC1 LRC2 ETX
```

## ■ Appendix A - Modbus Control via Remote Operator


To control a soft starter via an RS485 serial communications network using the Remote Operator, connect the Remote Operator to the network as described in the following sections.

### Grounding and Shielding

Twisted pair data cable with earth shield is recommended. The cable shield should be connected to a GND device terminal at both ends and one point of the site protective earth.

### Termination Resistors

In long cable runs prone to excessive noise interference, termination resistors should be installed between B1 (-) and B3 (+) of the soft starter and the Remote Operator. This resistance should match the cable impedance (typically 120 Ω). Do not use wire wound resistors.

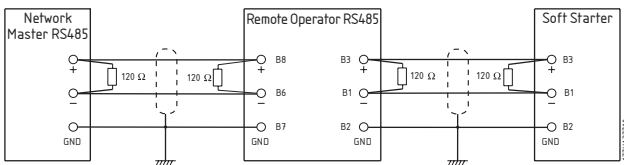


### RS485 Data Cable Connection

Daisy chain connection is recommended. This is achieved by parallel connections of the data cable at the actual device terminals.

### Remote Operator RS485 Network Connection Specifications

- Input impedance: ..... 12 kΩ
- Common mode voltage range: ..... - 7 V to + 12 V
- Input sensitivity: ..... ± 200 mV
- Minimum differential output voltage: ..... 1.5 V (with max loading of 54 Ω)


## Using the Remote Operator with MCD 200

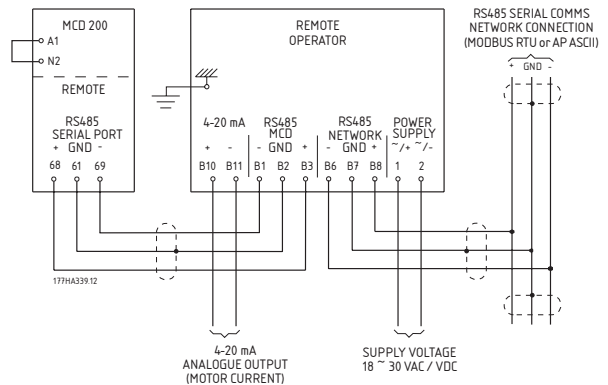

## Using the Remote Operator with MCD 3000

In order to operate correctly on the network, the MCD 3000 must be set for local operation only (i.e. set Parameter 20 = 2). The Remote Operator's default communications protocol setting is AP ASCII.

The RS485 Network Timeout setting on the Remote Operator applies to the link between the Remote Operator and the network. This can be set to any value between 0 and 100 seconds.

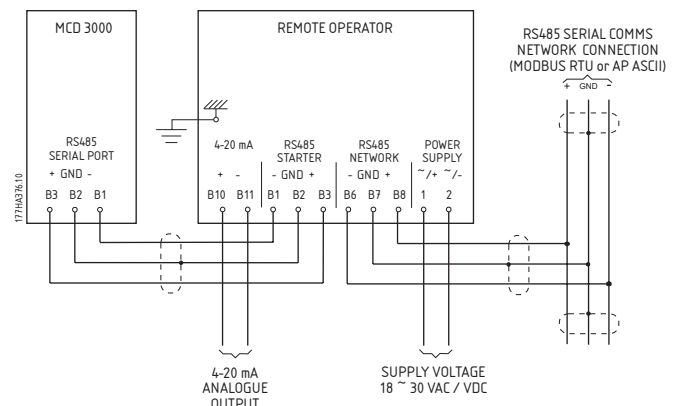

The Serial Timeout setting on the MCD 3000 (Parameter 24) applies to communications between the Remote Operator and the MCD 3000. See the MCD 3000 Operating Instructions for soft starter configuration details.

## MCD Modbus Module

### Programming

The Remote Operator must be configured to operate on the network. In order to access Programming Mode, the Remote Operator must be powered up when the soft starter is not running.

### Programming Procedure

1. To enter Programming Mode, hold down the Data/Prog pushbutton for four seconds. The default value of the first parameter will be displayed.
2. Use the Data/Prog pushbutton to advance to the next parameter.
3. Use the Stop/+ and Reset/- pushbuttons to adjust parameter values.

Programming Mode closes when the Data/Prog pushbutton is pressed after Parameter 8.



### N.B.!:

There is a 20 second timeout when the Remote Operator is in Programming Mode. Programming Mode will automatically close if no input is registered for 20 seconds. Any changes already made will be saved.

### Programmable Parameters

The Remote Operator offers the following programmable parameters:

Par . No.	Description	Default Setting	Adjustable Range
1	RS485 network baud rate	4 (9600 baud)	2 = 2400 baud 3 = 4800 baud 4 = 9600 baud 5 = 19200 baud 6 = 38400 baud
2	RS485 network satellite address	20	1 to 99
3	RS485 network timeout	0 seconds (= off)	0 to 100 seconds
4	RS485 network protocol	1 (AP ASCII)	1 = AP ASCII protocol 2 = Modbus RTU protocol
5	Modbus protocol parity	0 (no parity)	0 = no parity 1 = odd parity 2 = even parity 3 = 10-bit transmission

6	Motor FLC (A)	10	1 to 2868
7	Analogue output 4 mA offset (%)	100	80 to 120
8	Start, Stop, Quick stop function disable	0	0 = Remote Operator and Network start, stop, quick stop function enabled. 1 = Remote Operator start, stop, quick stop function enabled. Network start, stop, quick stop function disabled. ** 2 = Remote Operator start, stop, quick stop function disabled. Network start, stop, quick stop function enabled. * 3 = Remote Operator start, stop, quick stop function disabled. Network start, stop, quick stop function disabled. *, **

\* Remote Operator Reset/- pushbutton is always enabled.

\*\* RS485 Network reset and forced communication trip functions are always enabled.

**Troubleshooting**

The Remote Operator display and status indication LEDs can indicate abnormal operating and system conditions. The following messages indicate an error in the Remote Operator's link to the RS485 network:

Display Indication	Problem	Possible Solution
nEt on display	A loss of communication has been detected on the RS485 link to the network.	The Remote Operator has an RS485 Network Timeout Protection setting (Parameter 3). This error is reported when no communication occurs for longer than the timeout setting. The system will become active as soon as communication is restored. To clear nEt from the display, press the Data/Prog pushbutton momentarily or send a Reset command from the network Master.
SP flashing on display	Soft starter is off and being programmed from the serial network.	Finish soft starter network programming procedure and exit Programming Mode.

**■ Appendix B - Specifications**
**Enclosure**

Dimensions .....	35 mm (W) x 157 mm (H) x 90 mm (D)
Weight .....	250 g
Protection .....	IP20

**Mounting**

Spring-action plastic mounting clips (x 2)

**Connections**

Soft starter .....	6-way pin assembly
Network .....	5-way male and unpluggable female connector (supplied)
Maximum cable size .....	2.5 mm <sup>2</sup>

**Settings**

Protocol .....	Modbus RTU, AP ASCII
Address range .....	0 to 31
Data rate (bps) .....	4800, 9600, 19200, 38400
Parity .....	None, Odd, Even, 10-bit
Timeout .....	None (off), 10 s, 60 s, 100 s

**Certification**

C✓ .....	IEC 60947-4-2
CE .....	IEC 60947-4-2